


Figure 1A

Figure 1B

Figure 1C

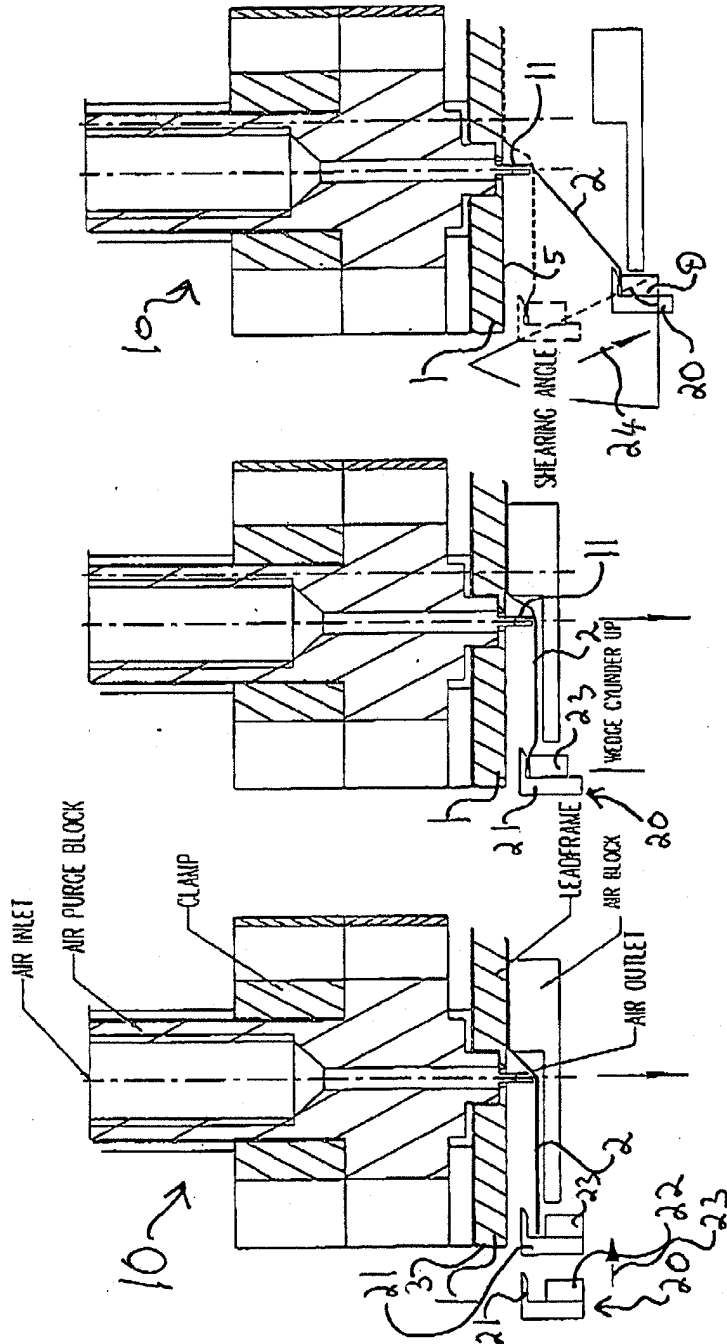

STEP 1 : AIR PURGE DOWN AND
FINGER WEDGE INSERTED
INTO MASKING TAPE


Figure 2A

STEP 2 : FINGER WEDGE MOVES UP
AND GRIP ONTO THE MASKING TAPE

Figure 2B

STEP 3 : FINGER WEDGE SHEAR DOWN
AT SHEARING ANGLE TO REMOVE
MASKING TAPE FROM THE LEADFRAME

Figure 2C

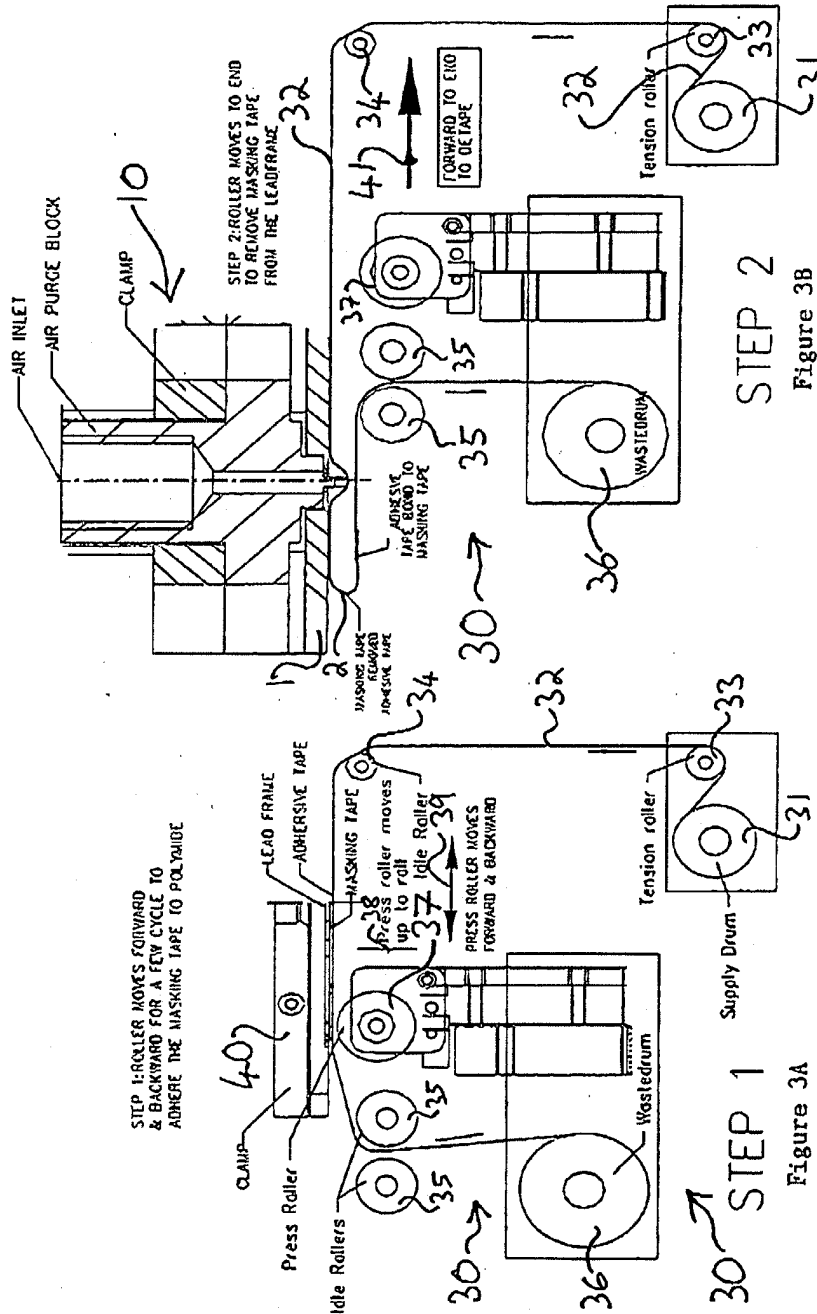

STEP 2
Figure 3B

STEP 1
Figure 3A